Measuring Guide:


LARSON

SINGLE PANEL DOOR SCREENS

Applies only to Escape, and Inspire inside mount applications.

Measuring a typical hinged door for the net screen opening dimensions.

Begin by deciding where best to position the screen. The opening must be plumb, level and square, and the bottom guide of the retractable screen must rest on a flat, level and solid surface. Make any needed adjustments to the opening (or plan and allow for shimming) before measuring for the screen. Determine the **net screen opening dimension** (width x height) as measured from the outermost edges of where the retractable screen will rest. Screens are then made to fit these dimensions. Manufacturing tolerances are **plus or minus 1/16**". We recommend that with inside the frame installations (**options A or B**) that you **deduct an additional 1/16**" from the width and height dimensions that you submit in order to assure that the screen is not too tight in the opening during installation. If you plan on using shims or threshold transitions, be sure to also deduct appropriately for these. See the product model catalog pages and installation instructions for more detail.

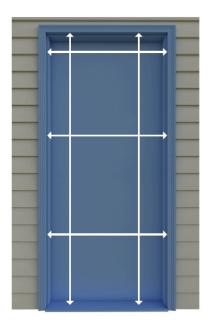

COMMON INSTALLATIONS

OPTION A Inside the Frame (Recess / Inset Mounted)

OPTION B Fully Inside the Frame (Recess / Inset Mounted)


OPTION C Outside the Frame (Surface / Face Mounted)


RECORD FINAL NET SCREEN OPENING DIMENSIONS

W _____

(If using installation option A or B, deduct 1/16" from the width and height to order).


OPTION A (Recommended) **INSIDE THE FRAME INSTALLATION**Recess Mounted at the Brickmould




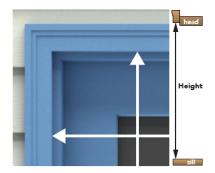

OPTION B


INSIDE THE FRAME INSTALLATIONFully Inside the Master Frame




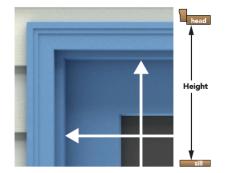

OPTION C

OUTSIDE THE FRAME INSTALLATION Surface / Face Mounted



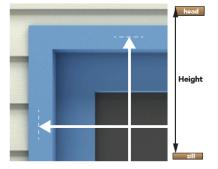

Note: For sliding patio doors, terrace doors and other openings, please contact Larson for additional guidance.